



Компонент	Тип
DA1	K140VD7
DD1	K155AЛH
DD2, DD3	K155ME7
DD4, DD5, DD6	K155ME5
DD7, DD8	K155AE1
DD9, DD14, DD44	K155AA3
DD10	K155AA2
DD11, DD15	K155AA4
DD12, DD28, DD29	K155M14
DD13	K155AA8
DD16	K155TM2
DD17	K589P12
DD18	K580BM80
DD19, DD20	K155M11
DD21	K155AM1
DD22, DD23, DD24, DD25, DD26, DD27	K573PФ2
DD30, DD31	K589AП16
DD32, DD33, DD34, DD35	K155K12
DD36, DD37, DD38, DD39, DD40, DD41, DD42, DD43	K565PY5
DD45	K580BB55

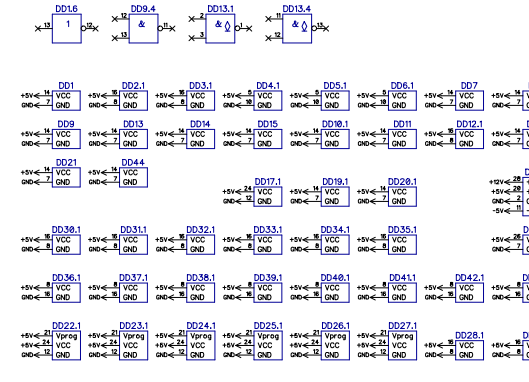

+5V Усиление питания

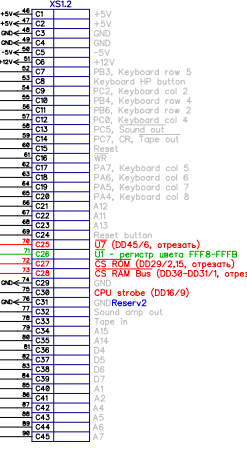

TV out